





② Press  when lamination blink, then sauna heater will start standby mode, lamination of  will be on when it arrive the setting working time. Sauna heater will work according to setting working time and temperature, and it will turn off automatically after arriving appointed working time.

4. Reservation setting

① Press  until its lamination blink, and press  to its lamination blink, then Time table / Temperature table blink.


② Press  or  to the setting time, press  /  to the setting temperature.

③ Press  then Time table blink.

④ Press  or  to set the off time.

⑤ Press  to finish setting.

5. Open Ozone generator

Press  until its lamination on, then Ozone generator will work for disinfecting sauna room, it will be off automatically accoring to setting working time last time.

6. Set the working time of Ozone generator

① Press  , and press  to Time table blink.

② Press  or  to the setting time.

③ Press  to finish setting.

7. Correct the time

① Hold down  to Time table blink.

② Press  or  to adjust time.

③ Press  to finish adjustment.

8. Correct the temperature (When actual temperature have error with display temperature)

① Hold down  to Temperature table blink.

② Press  /  to adjust temperature.

③ Press  to finish adjustment.

fin^{sauna}
tech

SAUNA ISITICISI HARİCİ KUMANDA PANELİ MONTAJ KLAVUZU (DİJİTAL EKРАН)



- ① Kumanda panosu Lc1-D1810 3-9 kw ısıtıcılar için kullanılır.
 - ② Kumanda panosu Lc1-D2510 10,5-15 kw ısıtıcılar için kullanılır.
 - ③ Kumanda panosu Lc1-D4011 18-30 kw ısıtıcılar için kullanılır.
- UYARI : LÜTFEN MONTAJ KLAVUZUNU DİKKATLİCE OKUYUNUZ.